


## Used parts

(Note: Some parts may be different than images)

1. Backrest



2. Seat+mechanism+armrests

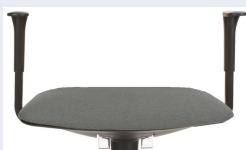

3. Gaslift with cover



4. Base



5. Casters



6. Screws

### Model Flap

A	M8x14	4 pcs	Backrest
		1 pcs	IMBUS



## Assembly instructions – model FLAP

[www.emagra.cz/cs/m-388-kancelarska-zidle-flap-b](http://www.emagra.cz/cs/m-388-kancelarska-zidle-flap-b)

### STEP 1

1. Take the seat out of the box
2. Take the backrest out of the box
3. Remove headrest, gaslift, base, casters, screws (3,4,5,6)



### STEP 2

1. Fasten backrest to the mechanism
  2. Tighten the screws
- A- 4 pcs



### STEP 3

1. Insert 5pcs of casters into the base, then insert gaslift into the opening in the base
2. Put the plastic cover on the gaslift
3. Insert the gaslift into the corresponding hole in the mechanism
4. Click the plastic cover into the seat



### User guide

#### Maintenance and attention

1. The chair can only be used by one person at a time.
2. Do not use the chair as a stool or ladder.
3. Do not use the chair unless all parts are properly assembled.
4. Do not use the chair until all screws are properly tightened.
5. If the chair is damaged by external influences, do not use it without expert repair.
6. For professional service, please contact us by phone +420 463 034 155, or by mail export1@emagra.cz



## Using instructions - model FLAP/B/W




Armrest is height adjustable

Lever used for height adjustment of the chair.  
Push the lever forward to activate the gaslift.  
Please lighten the seat when moving up.

Lever used to lock the backrest position.  
Push the lever forward to release the  
backrest. Push the lever back in the  
working position to block the backrest.

**Detail of the seat**

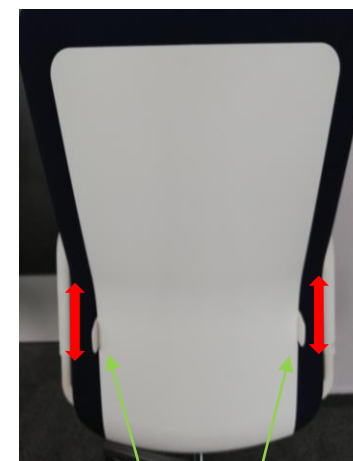

Two levers, serving as a separately  
height-adjustable lumbar spine support