

Used parts

(Note: Some parts may be different than images)

1. Gaslift



2. Casters



3. Armrests



4. Synchro mechanism



5. Seat



 
6. Base



7. Backrest



8. Headrest



9. Screws


Model X4 / armrests 3B

A	M6x30	6pcs	Armrests
B	M8x30	4pcs	Mechanism
C	M8x14	3pcs	Backrest
D	V3,5x18(20)	2pcs	Headrest
		1 pcs	IMBUS

Assembly instructions - model X4 seat with depth regulation

STEP 1:

1. Insert armrests to the seat
2. Be aware of the correct position of the left and right armrests
3. Fasten the screws A x 6pcs

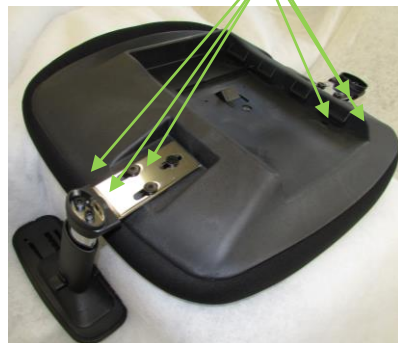

STEP 2:

1. Fasten mechanism to the seat
2. Tighten the screws B x 4pcs



STEP 3:

1. Fasten backrest to the mechanism
2. Tighten the screws C x 3pcs



STEP 4:

1. Insert 5pcs of casters into the base, then insert gaslift into the opening in the base
2. Insert the gaslift into the corresponding hole in the mechanism

STEP 5:

1. Fasten headrest to the backrest
2. Tighten the screws Dx 2pcs



User guide

Maintenance and attention

1. The chair can only be used by one person at a time.
2. Do not use the chair as a stool or ladder.
3. Do not use the chair unless all parts are properly assembled.
4. Do not use the chair unless all screws are properly tightened.
5. If the chair is damaged by external influences, do not use it without expert repair.
6. This is a mechanical product subjects to user stress, it is necessary to check the chair regularly and possibly tighten the screws.

For professional servis, please contact us by phone +420 463 034 155 or by mail export1@emagra.cz




Control for height regulation of chair

Control for depth regulation of seat

Control for synchro **mechanism RS**



Headrest adjustable
in height and angle

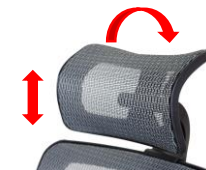

4D adjustable **3B armrests**
with softened polyurethane
foam on the touch part
Options of regulation:
height and width
forward / backward
rotatable left/right



Handle for regulation of mechanics stiffness according to users weight