

## Used parts

(Note: Some parts may be different than images)

1. Gaslift



2. Casters



3. Armrests



4. Asynchronous mechanism



5. Seat



6. Base



7. Backrest



9. Screws

## Model LEX


A	M6x35	6pcs	Armrests
B	M6x20	4pcs	Mechanism
C	M6x25	4pcs	Backrest
D	4x16	2pcs	Plastic cover for mechanism
		1 pcs	IMBUS



## Assembly instructions - model LEX


### STEP 1

1. Insert armrests to the seat
2. Be aware of the correct position of the left and right armrests
3. Fasten the screws A x 6pcs

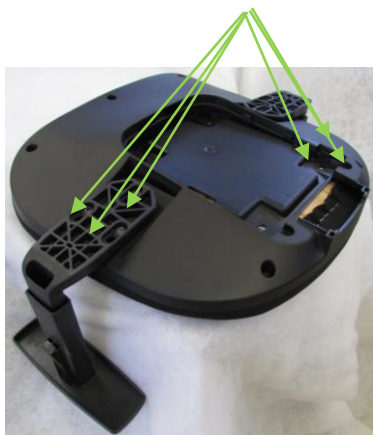

### STEP 2:

1. Fasten mechanism to the seat
2. Tighten the screws B x 4pcs
3. Fasten backrest to the mechanism
4. Tighten the screws C x 4 pcs

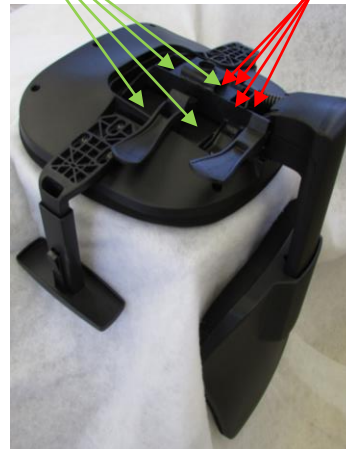


### STEP 3:

1. Fasten the plastic cover for to mechanism
2. Tighten the screws D x 2pcs



### STEP 4:

1. Insert 5pcs of casters into the base, then insert gaslift into the opening in the base
2. Insert the gaslift into the corresponding hole in the mechanism

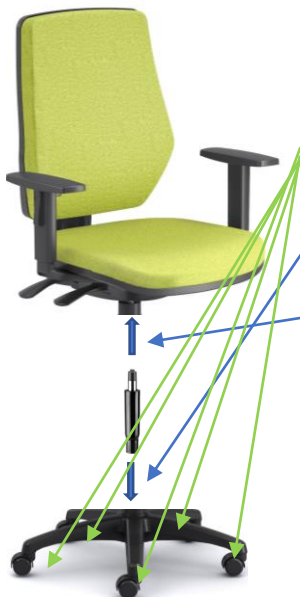

### User guide

#### Maintenance and attention

1. The chair can only be used by one person at a time.
2. Do not use the chair as a stool or ladder.
3. Do not use the chair unless all parts are properly assembled.
4. Do not use the chair unless all screws are properly tightened.
5. If the chair is damaged by external influences, do not use it without expert repair.
6. This is a mechanical product subjects to user stress, it is necessary to check the chair regularly and possibly tighten the screws.

For professional servis, please contact us by phone +420 463 034 155 or by mail export1@emagra.cz

## Using instructions – model LEX

